

# Nouveau®

## Heater Oil Column 2000W-2400W



This manual applies to the following products:

SKU: 369931/Model: LOR04-1024

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

## INTRODUCTION:

- Before using your new heater, please carefully read through the following instructions. KEEP THIS BOOKLET IN A SAFE PLACE SO THAT YOU MAY CONSULT IT LATER.
- After removing the packaging, make sure that the appliance is in good condition.
- The packaging materials may contain plastic, nails etc., which may be hazardous and therefore should not be left within the reach of children
- In order to prevent the risks of a fire, an electrical shock, burns and other injuries, it is imperative to observe basic safety measures when using electrical appliances.

## IMPORTANT SAFETY INFORMATION

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** In order to avoid overheating, do not cover the heater.
6. The heater must not be located immediately below a socket-outlet.
7. Do not use this heater in the immediate surroundings of a bath, shower, or swimming pool.
8. This heater is filled with a precise quantity of special oil. Repairs that require opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
9. When scrapping the heater, follow the regulations concerning the disposal of oil. Do not dispose of the heater in household waste and recycle the heater where local facilities exist for electrical goods and oil.
10. Do not use the appliance for anything other than its intended use. This appliance is for domestic indoor use only.
11. Place the appliance on a flat, stable, heat-resistant surface. Operating the product in any other position could cause a hazard.
12. There may be trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
13. Do not attempt to repair, disassemble, or modify the appliance. There are no user-serviceable parts inside.
14. **CAUTION:** if using an extension lead, please ensure you do not exceed the maximum rated running wattage/load of the extension lead.
15. Do not recharge non-rechargeable batteries.
16. Do not dismantle, open or shred cells.
17. Do not expose cells to heat or fire. Avoid storage in direct sunlight.
18. Do not short-circuit a cell. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
19. Do not remove a cell from its original packaging until required for use.
20. Do not subject cells to mechanical shock.
21. In the event of a cell leaking, do not allow the liquid to come in to contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

22. Observe the plus (+) and minus (-) marks on the cell and equipment and ensure correct use.
23. Do not use any cell which is not designed for use with the equipment.
24. Do not mix cells of different manufacture, capacity, size or type within a device.
25. Cells usage by children should be supervised.
26. Seek medical advice immediately if a cell has been swallowed.
27. Always purchase the correct cell recommended by the device manufacturer for the equipment.
28. Keep cells clean and dry.
29. Wipe the cell terminals with a clean dry cloth if they become dirty.
30. Retain the original product literature for future reference.
31. Use only the cell in the application for which it was intended.
32. When possible, remove the cell from the equipment when not in use.

**WARNING:** The thermostat of this heater is not equipped with a device to control the room temperature with accuracy. It is recommended not to use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

#### TECHINCAL PARAMETERS:

M10 SKU	Model	Rated Power	Rated Voltage	Frequency	Class I
369931	LOR04-1024	2000-2400W	220-240V	50-60Hz	

#### ASSEMBLY INSTRUCTIONS:

Turn the radiator upside-down on a scratch-free and stable surface to prevent damage to the paint finish or your floor surfacing.

- Turn the radiator upside-down
- Pull out the wheelbases to both outmost sides, (see Fig 1).

Only operate the radiator in normal upright position with wheels assemblies attached to the bottom.

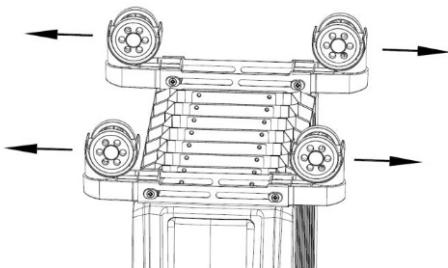 


Fig 1

#### Remote controls

The remote control requires one CR2025 - 3V cell (supplied).

 
Follow the +/- polarity indicated on the remote control.

The remote control must be pointed towards the remote sensor on the control panel.


# Nouveau

If the remote control doesn't operate as expected, replace the cell.

## OPERATIONAL CONTROLS:

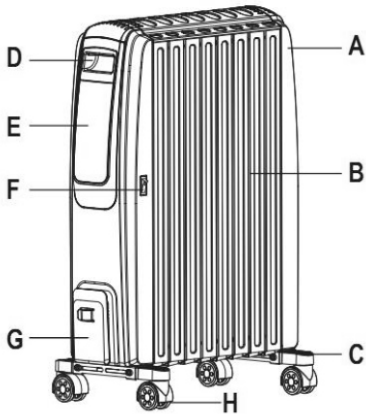

 
- A. Rear handle and remote-control storage slot
- B. Heater body
- C. Wheelbase
- D. Front handle
- E. Control panel
- F. On/off power switch
- G. Cable storage
- H. Wheel

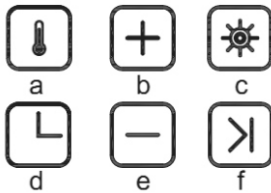

- a. Thermostat button
- b. +: Temperature & hours increase button
- c. Power/Mode button
- d. Timer button
- e. -: Temperature & hours decrease button
- f. Stand-by button



 REMOTE CONTROL

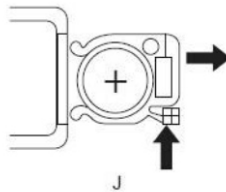

Battery (CR2025 - 3V)

Move the appliance using the integrated handle.

The remote control can be stored in the slot integrated into the appliance at the rear cover if not used.

# Nouveau

## Switching On


Press the on/off power switch [F] to turn the appliance on. The product is now in standby awaiting a mode to be selected via the buttons on the appliance or the remote control.

The appliance emits a beep sound.

The light on (  ) will turn on.

The following settings can be performed using the touch pad or the remote control.

A beep sound is emitted at every key press.

Press the stand-by button [f] to exit the stand-by mode and begin selection of the different modes. Heater will start working under low power (  ).

## Heating Power Level and Eco Mode Setting

### Heating Power

Press the Power/Mode button(c), it will cycle from DEFAULT → Low Power(  ) → Medium Power (  ) → High Power (  ) → Eco mode( ECO ).

Under Low power, Medium power and High power setting, the heater will keep working controlled by thermal cut-out.

### Note:


 

The higher the power is, the quicker the desired temperature will be achieved but the power consumption will be higher.

Lower power levels are recommended when the heater is being used for an extended period.

### Eco mode

Press the Power/Mode button (c), until the “ECO” light turns on.

Under Eco mode, the heating power will adjust automatically when the room temperature is approaching the setting temperature.

Example: The setting temperature is 25 °C. When the room temperature is less than 22°C, the heater will work under High power (  ). When the room temperature rises to 23 °C, the heater will change to work under Medium power (  ). When the room temperature rises to 24 °C, the heater will change to work under Low power(  ). When the room temperature reaches to the setting temperature 25 °C, the heater will switch off automatically. And when the room temperature is lower than setting temperature, the heater will switch on again under Eco mode.

Remark: if no thermostat setting, the default temperature is 23 °C under Eco mode.

### Thermostat Setting

**Only under Eco model can make the thermostat setting.**

Desired temperature setting rang:10 °C--30 °C

1. Press the Power/Mode button (c), until the “ECO” light turn on.
2. Press the thermostat button (a), the temperature digit will blink.
3. Use the “+” and “-” [b] and [e] buttons to set the desired temperature.
4. The setting temperature digit will stop blinking and the current room temperature will appear after the desired temperature is set.
5. The heater will maintain the air temperature in the room by switching on and off automatically.

# Nouveau

## Timer: Auto Power on

This function should only be set if you require the heater to be automatically turned on after a certain period (1 to 24 hours from the time the function is set). Only change timer power setting under standby mode.

1. Press the on/off power switch [f] to turn the appliance on. The light on (☺) will turn on. The appliance will be in Stand-by mode.
2. Press the Timer button(d), the light on (H) will turn on, and the start hour digit (0.0) will blink.
3. Use the "+" and "-" buttons [b] and [e] to set the heater operation time between 1 and 24 hours. 0.0-5.0 hours increase by 0.5 hour, 5.0-24 hours increase by 1 hour. This function will activate once the hour digit stops blinking. The countdown digits will show on the display.
4. The heater will automatically turn on when the time runs out.
5. Remark: After the timer power on setting, make the power and ECO mode settings. And under ECO mode, make the temperature settings. So that the heater will turn on at the desired temperature or power setting.
6. Note : When using timer modes, consideration should be given to the fact that the heater may come on whilst unattended. Always follow the safety instructions provided.

## Timer : Auto power off

This function should only be set if you require the heater to be automatically shut off after a certain period (1 to 24 hours from the time the function is set).

1. When heater working, press the Timer button(d), the light on (H) will turn on, and the start hour digit (0.0) will blink.
2. Use the "+" and "-" buttons [b] and [e] to set the heater operation time between 1 and 24 hours. 0.0-5.0 hours increase by 0.5 hour, 5.0-24 hours increase by 1 hour. This function will activate once the hour digit stops blinking. The countdown digits will show on the display.
3. The heater will automatically shut off when the time runs out.

## Off

Press the stand-by button [f] until sleep mode is selected and the control panel screen goes off.

Press the on/off switch [f] to turn the appliance off completely.

To disconnect the appliance, remove the plug from the socket.

## OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheating. For example: due to the total or partial obstruction of the vents. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the vents. Then switch it back on as described above. The appliance should now operate normally. Should the problem persist, please contact Customer Service for assistance.

## TILT SWITCH

This will automatically turn the appliance off if the appliance is overturned.

When the appliance is in the appropriate operation position again, please turn the appliance on by referring to the OPERATION.

# Nouveau.

## CLEANING & MAINTENANCE

- Always unplug the appliance and keep it away from any socket before cleaning.
- To clean the outer surface of the appliance, use a lightly damp cloth. Then, dry it thoroughly with a soft, dry cloth before using again.
- Do not use any cleaning or chemical products of any kind. Do not let water enter the openings on the heater. Do not use wax or products that create a shine as they can react to heat and cause discoloration.
- When the appliance is not being used for prolonged periods, ensure that it is fully unplugged from the socket and store in its packaging for simple storage and later use.
- In case of breakdown and/or poor functioning of the appliance, disconnect the appliance from the power supply and contact an authorized repairer.

NOTE: As a result of continual improvements, the design, and specifications of the product within may differ slightly to the unit illustrated on the packaging.

