


 
 





 
 



 
 
 
 

 

 




# Nouveau®


## Outdoor Chair Swing Kids Folded Ladybird

<p>A</p>  <p>2PCS</p>	<p>B</p>  <p>1PC</p>	<p>C</p>  <p>1PC</p>	<p>D</p>  <p>2PCS</p>	<p>E</p>  <p>1PC</p>
<p>F</p>  <p>1PC</p>	<p>G</p>  <p>2PCS</p>	<p>H</p>  <p>1PC</p>	<p>I</p>  <p>1PC</p>	<p>J</p>  <p>2PCS</p>
<p>K</p>  <p>1PC</p>	<p>L</p>  <p>1PC</p>	<p>M</p>  <p>4PCS</p>	<p>N</p>  <p>2PCS</p>	<p>O</p>  <p>2PCS M6*45</p>
<p>P</p>  <p>4PCS M6*50</p>	<p>Q</p>  <p>2PCS M6*55</p>	<p>R</p>  <p>2PCS M6*62</p>	<p>S</p>  <p>6PCS M6*70</p>	<p>T</p>  <p>16PCS</p>
<p>U</p>  <p>2PCS</p>	<p>V</p>  <p>1PC</p>	<p>W</p>  <p>1PC</p>		

This manual applies to the following products:

SKU:382771/Model:382771

## Outdoor Chair Swing Kids Folded Ladybird

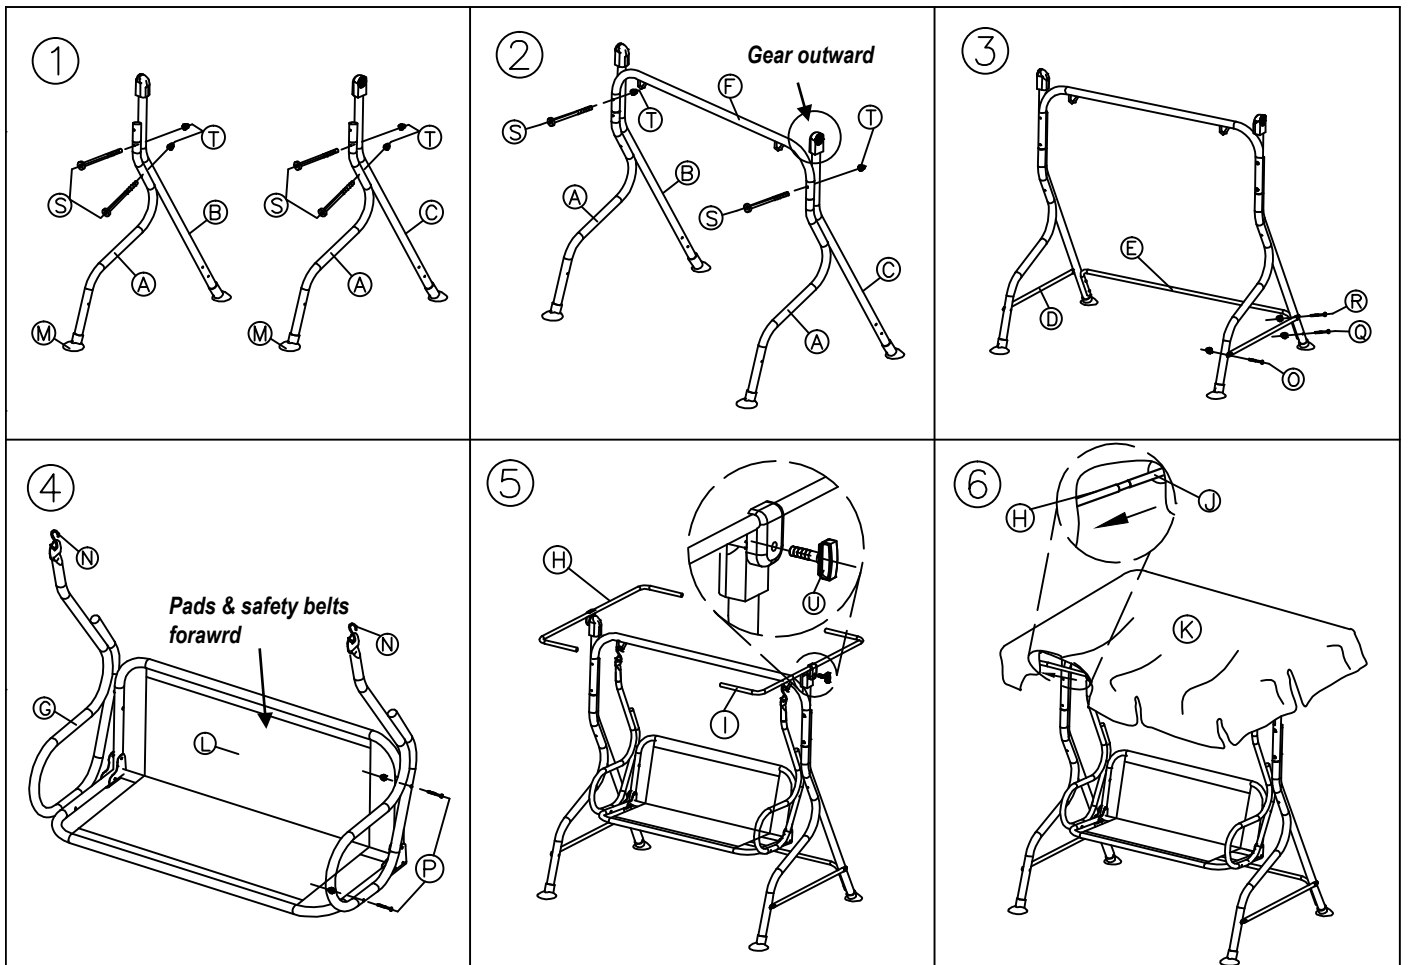

### Warning:

1. NOT suitable for children under 3 years.
2. Suitable for 4-8 year old children.
3. This swing is suitable for TWO children ONLY and DO NOT exceed the rated load of 80kg in totals.
4. Choose an appropriate location and ensure the unit is installed on level and firm ground.
5. Inspect the swing in period and ensure all fasteners are securely tightened before each play.
6. Clean the objects around the swing before playing.
7. When children are playing, that it is under the supervision of adult(s).
8. Keep fingers away from the moving parts.
9. DO NOT stand on the product.
10. DO NOT sit suddenly on the swing with force.
11. DO NOT seriously shake the swing during play.
12. Be Aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
13. Move the swing indoors when in extremely inclement weather, as heavy rain, snow & wind.
14. The swing may change the color due to UV exposure and climate.
15. Failure to follow these safety tips could result in product damage, property loss, personal injury even death.

### Safety tips:

1. Using the applicable ground pins (sold separated) into the hole of feet (M) to securing the swing on the ground for the better stability.



2. The safety belts can not ensure 100% protection, so that please NOT over swing and always holding the handrail during play.

This manual applies to the following products:

SKU:382771/Model:382771