

Nouveau®

Metal Panel Heater

OPERATING INSTRUCTIONS



Model: NHPH120 & NHPH220 SKU 2068076 & 2068077

General Care and Safety Guide

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: You must not cover this heater. Covering this heater presents fire risk and will activate the safety fuse; permanently disabling the unit.

WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING: To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.

WARNING: In order to avoid overheating or fire, do not cover the heater.

- The heater must not be located immediately below a socket outlet.
- Do not use the heater if it has been dropped or damaged.
- Do not use if there are visible signs of damage to the heater.
- Ensure heater is on a flat, stable, heat-resistant surface.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.
- Keep all objects at least 1 metre from the front and 300mm from the sides of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use only the voltage specified on the rating label of the appliance.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.

General Care and Safety Guide

- **Never use the appliance to dry clothes.**
- Always unplug appliance when not in use.
- Do not connect the appliance to mains supply until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or main unit.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident
- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this heater is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this heater provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Don't place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and use handle provided when moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- The appliance must not be immersed in any liquids.
- There are no user serviceable parts installed in the unit.
- Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
- This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
- If your appliance does not work, or is not working properly, contact the place of purchase or the Customer Services Team.

Assembly For Freestanding

Before using this heater, it must either have feet fitted or be mounted to a wall.

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings

- Check whether the parts are complete and the product is intact when open the package.
- If you want to use the electric heater in a mobile way, please install the rollers provided in the package. Make sure the heater is correctly fixed with the screws provided. Please make sure the base is level, stable and clean.
- Please note **the safe distance** mentioned below.

Steps for castor installation

 
1. Carefully turn the heater upside-down on a scratch-free and stable surface. Be careful to prevent damage to the cosmetic finish or your floor surfacing.
2. Mount the stand in the corresponding location of the lower part of the product as shown above and then fix the randomly supplied screw at the bottom of the product with a screwdriver and tighten the screw.



Assembly For Wall Mounting

WALL MOUNTED HEATERS ARE ONLY TO BE MOUNTED ON WALLS THAT COMPLY WITH CURRENT AS/NZS SPECIFICATIONS & BUILDING REGULATIONS

- Position the panel heater within one metre of a wall socket. (Note the power cord comes out from the right-hand side of the heater from the bottom of the control panel).
- Do not run the power cord behind the heater
- Do not mount in front of or below the wall socket.
- Ensure the heater is mounted at least 300mm above the floor and at least 400mm from either side and 600mm from anything above the heater.

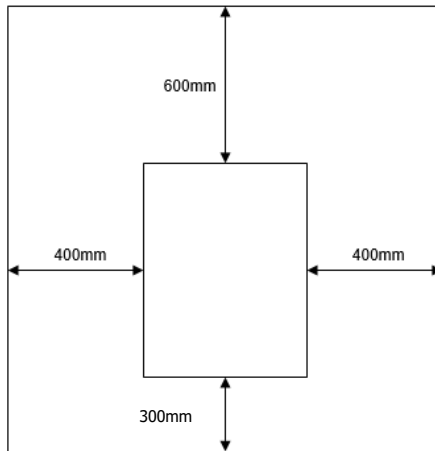

WALL MOUNTING THE HEATER

1. First mark the wall where the heater will be installed taking into account safe distances around the heater as shown above. Make two marks on the wall at the same height and with a horizontal separation between them.
 - NHPH120: 180mm
 - NHPH220: 495mm
2. Then make a mark below each of them at a vertical distance of 24mm. You can use the included brackets as a guide to make the marks on the wall. Make sure that the marks are at a height to provide 300mm clearance between the bottom of the heater and the floor.

 


Assembly For Wall Mounting cont.



3. Drill holes in the wall at each of the marks with a diameter of 8mm and a depth of 30mm.
4. Insert the plastic plugs into each of the drilled holes.
5. Place the metal brackets over the holes drilled in the wall and secure them by tightening the corresponding screws.



6. Turn the heater upside down and attach each support bracket to the appliance by screwing them into the holes on the bottom of the appliance (the same holes used to install the feet).

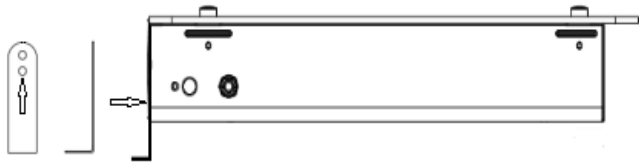

  7. Position the appliance on the wall by inserting the slots at the rear into the brackets installed in Step 1.

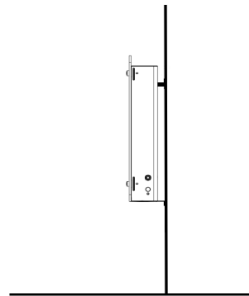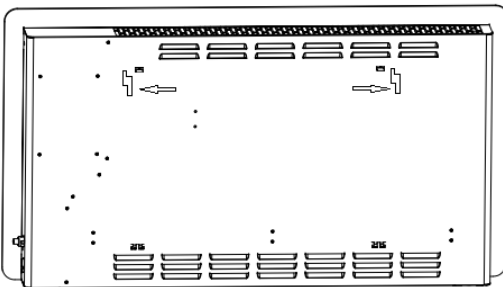

Operating Your Heater

Always choose a safe location for the appliance, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. Please follow the below instructions.

WARNING: In order to avoid overheating or fire, do not cover the heater.

WARNING: Keep all objects at least 1 metre from the front and 300mm from the sides of the appliance.

WARNING: Do not use this heater with a programmer, separate timer, remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

WARNING: Never leave this heater unattended when in use.

If mounted on castors, ensure heater is on a flat, stable, heat-resistant surface.

WALL MOUNTED HEATERS ARE ONLY TO BE MOUNTED ON WALLS THAT COMPLY WITH CURRENT AS/NZS SPECIFICATIONS & BUILDING REGULATIONS

Once the heater is in a safe operating position and all switches are in the off position, insert the power plug into the mains outlet.

CAUTION: Ensure the power cord is not tight because if pulled it may partially pull the plug from the socket. A partially inserted plug will overheat the plug and socket and could result in fire.

Note: When the appliance is turned on for the first time, it may release a slight odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the heating elements and should not occur again.

Operating Your Heater

Always choose a safe location for the appliance, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. Please follow the below instructions.

HEAT SETTINGS

Select the heating level:

Press the Level I power switch to activate low heat (approximately half of the maximum power).

Press the Level II power switch to activate high heat.



THERMOSTAT

1. Rotate thermostat knob clockwise until you reach the maximum position.
2. When the room reaches a temperature that is comfortable for you, slowly turn the knob anti-clockwise until the heater just turns off (you will hear a click).
3. The heater will now cycle on and off to maintain the comfort level you have set.
4. Take note of this setting position for future use.

Note: When the thermostat activates you may see a small flash of light (may look like a spark) from inside the heater. This is normal and there is no cause for concern.

Operating Your Heater

SAFETY DEVICES

This appliance has two protection devices:

- Resettable Thermal Link - this will automatically disconnect the power to the appliance at a pre-set overheat temperature. After cooling down it will reset and power on again. If this occurs, investigate what is causing the appliance to overheat.

CAUTION: The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

CARE AND CLEANING

- The heater requires regular cleaning to ensure trouble free operation:
- Unplug the heater from the mains supply before cleaning.
- Ensure that the heater has been allowed to cool down completely before cleaning.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
- Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.
- Never use solutions such as petrol, thinners or polishing agents.
- Ensure the heater is dry before plugging back into the mains supply.

Nouveau



Model No: NHPH120
Supply: 230-240 V AC 50 Hz
Wattage: 900-1000 W
Approval: GMA-526073-EA
CLASS I
QC Passed: PO#-WWYY
MADE IN CHINA

CUSTOMER SUPPORT
NEW ZEALAND PH: 0800 232 633

Nouveau



Model No: NHPH220
Supply: 230-240 V AC 50 Hz
Wattage: 1900-2000 W
Approval: GMA-526073-EA
CLASS I
QC Passed: PO#-WWYY
MADE IN CHINA

CUSTOMER SUPPORT
NEW ZEALAND PH: 0800 232 633

Nouveau.

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand
Monday – Friday 8am-5pm
Phone: 0800 232 633

Nouveau®

TWO YEAR WARRANTY

This product is covered by a 2 year warranty from the date of purchase against factory faults.

Should your product be faulty, it may be replaced, repaired or refunded as deemed appropriate by the retailer.

Valid proof of purchase will be required.

As the product is intended for home use only, commercial usage of the product for professional or industrial purposes will VOID this warranty.

This warranty is not intended to limit any rights under the Consumer Guarantees Act.

Mitre 10 (New Zealand) Ltd
67 Corinthian Drive
Albany
Auckland 0632
New Zealand
Phone 0800 232 633

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.

Nouveau®