 


# JOBMATE<sup>®</sup>

## INSTRUCTIONS TWO PORT WATER TIMER

### TIMER FEATURES

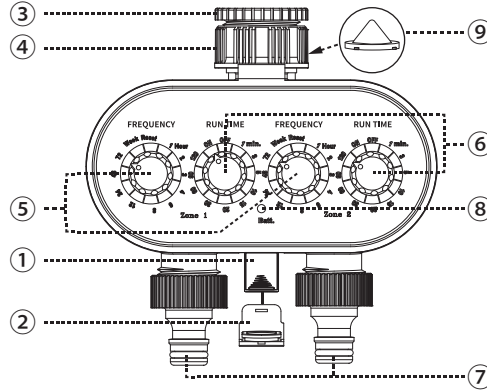

- ① Battery compartment & ② Battery compartment cover  
Slide out the battery compartment ①, and insert 2x (LR6/AA) 1.5V alkaline batteries.

**⚠ WARNING**

- Use only fresh alkaline batteries at the beginning of the season. **DO NOT** use rechargeable batteries.
- Test the unit by turning the Run Time knob to ON position. You should hear the sound of the motor within 10 seconds. If you do not hear the sound, check if the batteries are installed correctly.
- Turn Run Time to OFF position before connecting to tap.

- ③ 3/4" tap adaptor & ④ 1" tap connector

For 3/4" taps: install the timer onto the tap with the 3/4" adaptor ③ included.

For 1" taps: remove the 3/4" tap adaptor ③ and attach the 1" tap connector ④ to the tap directly.  
note: please always keep the filter ⑨ in place.

**⚠ WARNING**

**DO NOT** use spanners or pliers to avoid damage to the timer.

- ⑤ Frequency knob  
Determine how often you will water, from 1 hour to 1 week.
- ⑥ Run Time knob  
Choose how long to water, from 1 minute to 120 minutes.
- ⑦ Male snap-on connector  
Connect hose attachment to the male snap-on connector ⑦ at the bottom of the timer.
- ⑧ Led indicator  
Led indicator flashes once every 4 seconds.  
**⚠ WARNING**  
Replace with new batteries if led indicator flashes quickly or on steady.
- ⑨ Filter  
Filter traps dirt particles and prolong life of timer.  
**⚠ WARNING**  
Clean filter regularly and replace if worn.
- ⑩ Top cover  
Close cover to protect timer from dirt.

### PROGRAM TIMER


- Set Frequency (determine how often you will water, from 1 hour to 1 week.)
- Set Run Time (determine how long to water, from 1 minute to 120 minutes.)

**NOTE:** Make settings at the hour of the day you want watering to start. The first watering will start X hours later, X is the set Frequency hours.


**⚠ WARNING**

Frequency should always be longer than Run Time. (Example: Frequency=1H, Run Time=90 minutes, is NOT a valid setting.)

 **EXAMPLE 1 :** To water 2 times a day for 15 minutes, set Frequency to 12 and Run Time to 15. First watering will start 12 hours after the knobs are set.

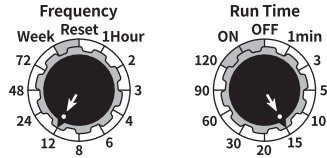

**EXAMPLE 2 :** To water 1 time a day for 30 minutes, set Frequency to 24 and Run Time to 30. First watering will start 24 hours after the knobs are set.

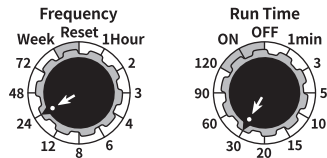 

**EXAMPLE 1 :** If you want the first watering to start at 7:00 am, then you make settings at 7:00 pm of the day (12 hours before).


**EXAMPLE 2 :** If you want the first watering to start at 6:00 am, then you make settings at 6:00 am of the day (24 hours before).

**⚠ WHEN MAKING CHANGES AFTER INNIAL SETTINGS:**


- Wait for min 3 seconds for timer to validate new settings after each change, which is indicated by quick flashing of the led indicator
- Changing Frequency or Run Time will change start time, which means the next watering time will be recalculated.

**EXAMPLE 3 :** Now is 6:00 am, your setting is Frequency =4 and Run Time=15, which means to water for 15 minutes every 4 hours, so timer will start watering at 10:00 am.

 Then at 8:00 am, you change the settings to Frequency =6 and Run Time=15, which means to water for 15 minutes every 6 hours, so the start watering time is changed into 2:00 pm.

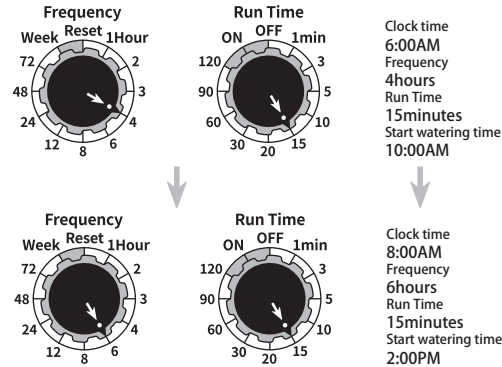

**MANUAL WATERING**

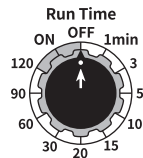 

1. To start manual watering, set Run Time to ON
2. To stop manual watering, set Run Time to OFF
3. When done, set Run Time to other desired setting

**PROTECT TIMER FROM DAMAGE**

1. This timer is only designed for outdoor use to control sprinklers or irrigation systems for watering, and can not be used for industrial purposes which in contact with food, chemicals and pesticides.
2. Operating water pressure is from 0 bar to 8 bars (0 psi to 116 psi).

3. Use with clean and freshwater only whose temperature shall be above 1°C and below 60°C.
4. Protect timer during winter season or freezing conditions. Remove from tap and drain water inside, remove batteries and keep indoors.
5. Timer is water resistant, NOT water proof. The timer must be installed above ground and vertically to the tap. DO NOT submerge it in water.
6. DO NOT pull the hose while attached to the timer, to avoid damage to timer.

