

# Nouveau®

## USB Desk Fan



This manual applies to the following products  
SKU: 361429 / Model: VS-U505

# Nouveau.

## **Table of Contents**

Important Safety Instructions

Operation of the product

Cleaning

Please read this manual carefully before use, and keep for further guidance

# Nouveau.

## **Important Safety Instructions**

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.**

**UNPLUG OR DISCONNECT THIS FAN FROM THE POWER SUPPLY BEFORE SERVICING.**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. The appliance is for household and indoor use only.
2. Before plugging in, check that the voltage on the fan rating label is the same as the mains supply.
3. To protect against electric shock, do not immerse any part of the fan in water or other liquid.
4. This fan is intended for use by competent adults only and children should always be supervised.

# Nouveau.

5. It is recommended to unplug the fan from the mains socket when not in use.
6. Always remove from the mains socket before cleaning.
7. The supply cable cannot be replaced. If the cable is damaged the appliance should be scrapped.
8. Do not let the cable hang over the end of a table or work surface or touch hot surfaces.
9. Do not use the appliance for other than its intended use.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. Ensure that the fan is switched off from the supply mains before removing the guard.
12. Don't use this fan in the immediate surroundings of a bath, a shower or a swimming pool. Never locate the fan where it may fall into the bathtub or other water container.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.
15. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.

# Nouveau.

## 2) Electrical safety

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children shall not play with the appliance.


Cleaning and user maintenance shall not be made by children without supervision.

## 2. Operation of the product

- 1) Please place the fan on a dry, clean and flat surface before to use.
- 2) Connect the fan to your computer USB connection port or DC5V USB connection port or use an adapter for transfer to 220-240V/1A supply.



- 3). Press the switch button to select the fan speed you need.

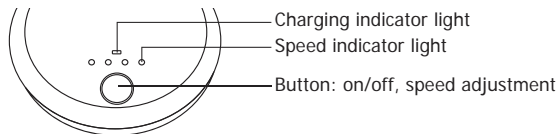

Press the button on the base to choose the fan speed from 1 to 4.

Press the button once = speed 1, a light is on. ● ○ ○ ○

Press the button twice = speed 2, two lights are on. ● ● ○ ○

Press the button three times = speed 3, three lights are on. ● ● ● ○

Press the button fourth times = speed 4, four lights are on. ● ● ● ●

**Note:** Speed indicator light is in Blue color.

Charging indicator light is in Red color.

During charging, red indicator light is flashed; Finished the charging, the red indicator light keeps on.

If lack of power, fan will stop working and all lights are off.

# Nouveau.

## 3. Cleaning

- Caution! The device must be turned off and unplugged before every cleaning.
- Once the fan is assembled, it is forbidden to disassemble the grids (guard) when cleaning.
- Clean the fan, including the safety guard, with a dry dust cloth
- Keep the air vents at the rear of the main body free from dust or fluff– use a vacuum cleaner to remove these when necessary. Do not probe any opening to remove fluff.
- Do not allow any water or other liquid to enter the motor housing.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents to clean the fan.



### **You can help protect the environment!**

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

MADE IN CHINA