




# DEVON COTTAGE

# 15M DRYING SPACE

## Installation Instructions

### Tools Required:

You will need a Phillips screwdriver and a drill to install using the masonry wall anchor (A). A 6mm drill bit is recommended. If you use the drill-less wall anchor (D), a hammer and Phillips screwdriver will be required.



**A** x 3m items  
Masonry Wall Anchor



**B** x 2 items  
Wall Screw




**C** x 1 item  
Line Hook




**D** x 3 items  
Drill-Less Drywall Anchor

**ASSEMBLY TIME:** Less than 1 hour

**Step 1:** Make sure the mounting bracket is facing the wall by swiveling it to the right. The holes in the mounting bracket indicate where to position the screws on the wall. Use a pencil to mark the wall in the desired position.

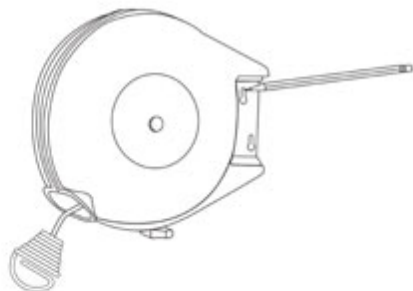


**Step 3:** Refer to step 2 depending on the type of anchor you are using and install as indicated. After installing the anchor, screw in hook (C). To use your retractable clothesline, stretch line out and clasp hooks together.

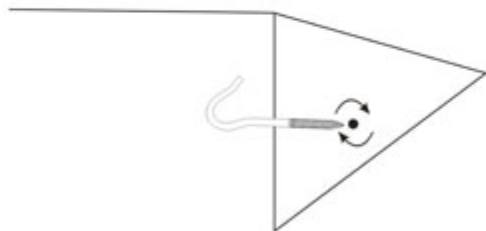


**Step 2: (installing into drywall)** Use drill-less anchors (D). Tap anchors into wall with a hammer until you reach the threaded section. Use your screwdriver to twist the anchor flush with the wall. Attach clothesline by screwing the wall screw (B) into the drill-less wall anchor.

**(installing into masonry):** Use drill with 6mm bit to drill hole into masonry. Tap masonry anchors (A) into wall until flush. Attach clothesline by screwing wall screw (B) into masonry anchor.

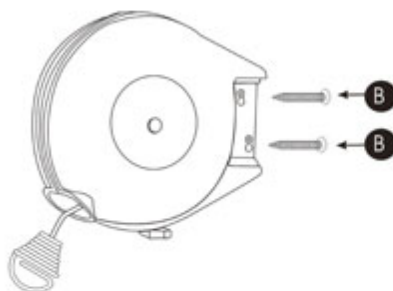

**Step 4:** To keep line secure, wrap it around cord anchor (located on bottom of case) before use. Wrapping the cord around twice is recommended.

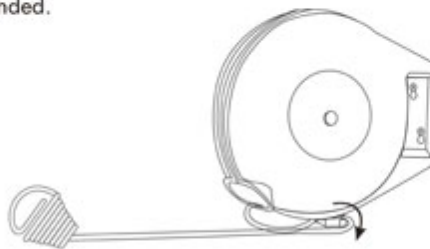

### Devon Cottage Guarantee

This product has been made in China to our demanding, high quality standards to give you complete satisfaction.

Item no. 80200



9 419043 802006